


INS8337A

Mini ITX Industrial Motherboard
User's Manual

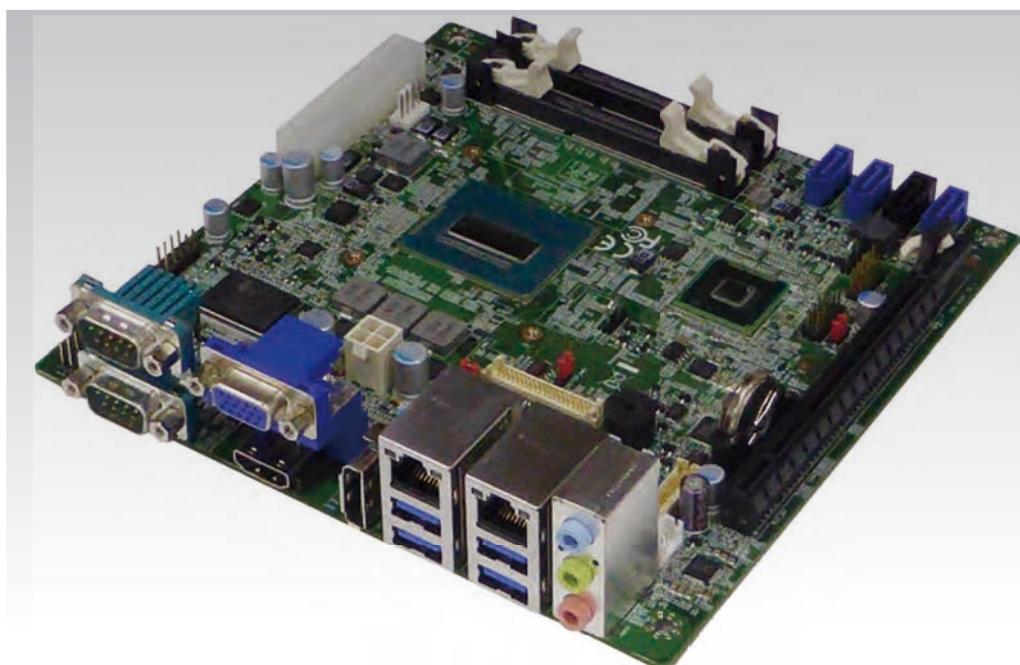

Safety Information

1. Electrical safety

- To prevent electrical shock hazard, disconnect the power cable from the electrical outlet before relocating the system.
- When adding or removing devices to or from the system, ensure that the power cables for the devices are unplugged before the signal cables are connected. If possible, disconnect all power cables from the existing system before you add a device.
- Before connecting or removing signal cables from the motherboard, ensure that all power cables are unplugged.
- Seek professional assistance before using an adapter or extension cord. These devices could interrupt the grounding circuit.
- Make sure that your power supply is set to the correct voltage in your area.
- If you are not sure about the voltage of the electrical outlet you are using, contact your local power company.
- If the power supply is broken, do not try to fix it by yourself. Contact a qualified service technician or your local distributor.

2. Operation safety

- Before installing the motherboard and adding devices on it, carefully read all the manuals that came with the package.
- Before using the product, make sure all cables are correctly connected and the power cables are not damaged. If you detect any damage, contact your dealer immediately.
- To avoid short circuits, keep paper clips, screws, and staples away from connectors, slots, sockets and circuitry.
- Avoid dust, humidity, and temperature extremes. Do not place the product in any area where it may become wet.
- Place the product on a stable surface.
- If you encounter any technical problems with the product, contact your local distributor.

Statement

- All rights reserved. No part of this publication may be reproduced in any form or by any means, without prior written permission from the publisher.
- All trademarks are the properties of the respective owners.
- All product specifications are subject to change without prior notice

Revision History

Revision	Date (yyyy/mm/dd)	Changes
Version 1.0	2014/12/02	Initial release

Packing list

- INS8337A Mini ITX
- CD (Driver + user's manual)
- I/O shield
- Cable kit for INS8337A: 1 x SATA, 1 x COM, 1 x USB



If any of the above items is damaged or missing, please contact your local distributor.


Table of Contents

Safety Information	1
1. Electrical safety	1
2. Operation safety.....	1
Statement.....	1
Revision History.....	2
Packing list.....	2
Table of Contents	3
Chapter 1: Product Information.....	5
1.1 Block Diagram	5
1.2 Key Features.....	6
1.3 Board Placement.....	8
1.4 Mechanical Drawings	9
Chapter 2: Jumpers and Connectors.....	10
2.1 Jumpers and connectors list.....	10
2.2 Jumpers & Connectors setting	11
COMS2	11
COM9_SW1/COM9_SW2.....	11
EDP_PWR1	11
EDP_PWR2	12
LCD_PWR	12
ME_ENABLE1	12
CPU_FAN /SYS_FAN (Wafer 4*1, 2.54mm, 1-Wall).....	12
FP.....	13
F_USB1 (Pin Header, 5*2 2.54mm, pin9 empty).....	13
GPIO	13
SPK (Wafer, 4*1 2.0mm)	13
LPC1 (Pin Header, 5*2, 2.54mm)	13
LCD_CTL.....	13
F_USB1: USB.....	14
EDP (Housing Header, 20*2)	14
Chapter 3: Getting Started	15
3.1 Installing System Memory.....	15
Chapter 4: AMI BIOS UTILITY	16
4.1 Starting	16
4.2 Navigation Keys	16
4.3 Main Menu.....	17

4.4 Advanced Menu	18
4.4.1 ACPI Settings	19
4.4.2 Trusted Computing.....	20
4.4.3 S5 RTC Wake settings	21
4.4.4 CPU configuration	22
4.4.5 SATA Configuration.....	24
4.4.6 AMT Configuration.....	25
4.4.7 USB Configuration.....	26
4.4.8 Super IO Configuration.....	27
4.4.9 HW Monitor	28
4.4.10 Network Stack.....	29
4.5 Chipset	30
4.5.1 PCH IO configuration.....	31
4.5.2 System Agent (SA) Configuration	32
4.6 Boot.....	33
4.7 Security	34
4.8 Save and Exit	35

Chapter 1: Product Information

1.1 Block Diagram

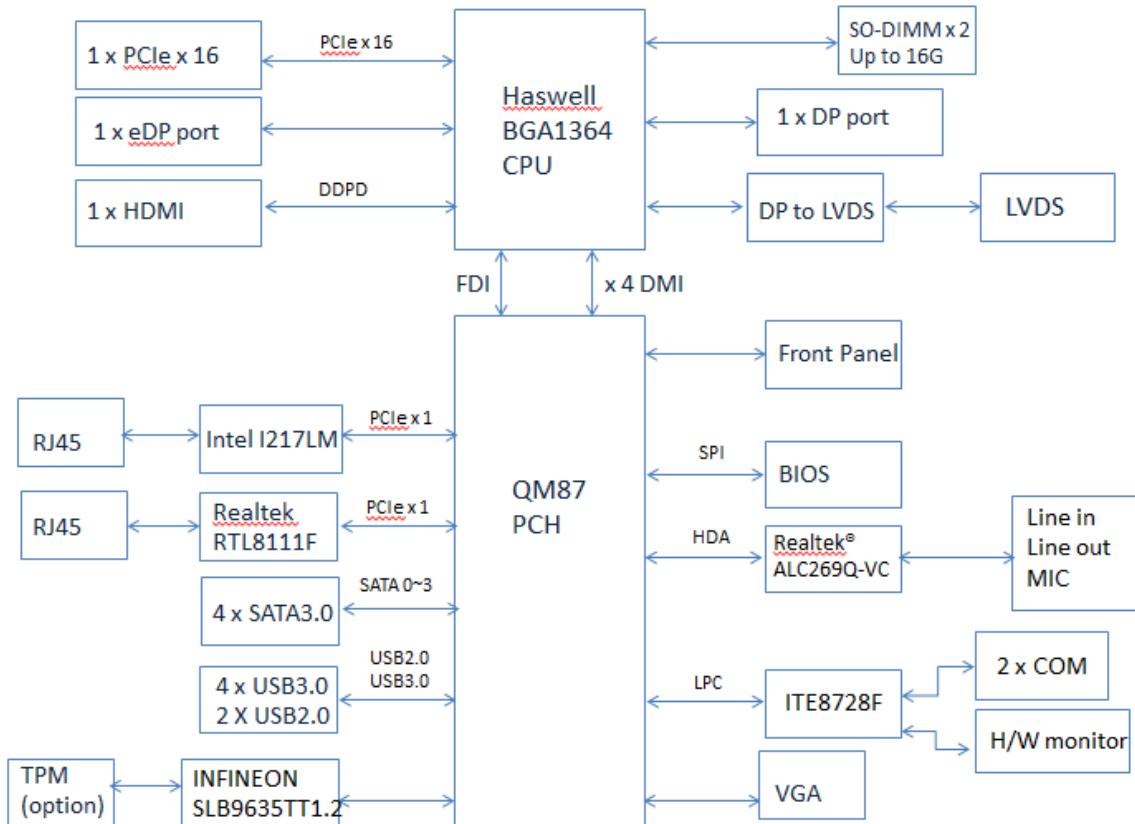


1.2 Key Features

System	
CPU Type	Intel® Haswell/ Haswell-Refresh Core™ i7/i5/i3, BGA 1364 Type Core™ i7-4700EQ (2.4 GHz 6M Cache, 47W) Core™ i5-4402E (1.8 GHz 3M Cache, 25W) Core™ i5-4422E (1.8GHz 3M Cache, 25W) Core™ i3-4112E (1.8GHz 3M Cache, 25W) Core™ i3-4102E (1.6 GHz 3M Cache, 25W) Celeron 2000E (2.2 GHz 2M Cache, 37W)
Chipset	Intel® Haswell QM87 PCH
Memory Type	2 x 204-pin SO-DIMM socket support DDR3L 1333/1600 SDRAM Max. up to 16 GB memory
BIOS	AMI UEFI BIOS with 64 Mb SPI Flash ROM support AMT9.0
Supoer I/O	ITE IT8728F
Watchdog	Reset; 1 sec.~255 min. and 1 sec. or 1 min. /step
Expansion Slot	1 x PCIe x16
Display	
Chipset	Integrated GFX in Haswell processor
Display Interface	Three / Dual display by VGA / Display Port / HDMI / LVDS / eDisplay Port
Audio	
Codec	Realtek® ALC269Q-VC High Definition Audio Codec
Ethernet	
Chipset	LAN1: Intel® I217LM 10/100/1000 Gigabit Ethernet PHY with AMT9.0 LAN2: Intel® I210 10/100/1000 Gigabit Ethernet Controller
WOL	Yes
Boot from LAN	Yes for PXE
Rear I/O	
COM Port	1 x RS-232/422/485 D-SUB 9-Pin Port for COM1 1 x RS-232 D-SUB 9-Pin Port for COM2 COM1&COM2 Pin 9 Selection for 5V/12V/RI , 5V & 12V (Max. : 1A output with Fuse)
Audio	1 x MIC-in, 1 x Line out, 1 x Line in
VGA	1
HDMI	1
DP	1
Ethernet	2 x RJ45
USB	2 x USB 3.0



Internal I/O	
SATA	3 x SATAIII , 1 x SATAII
USB	2 x USB 2.0 by pin header
eDisplay Port	1 (2 x 20-pin)
LVDS	1 (2 x 20-pin) for 24-bit with brightness control
Fan	2 (1 x 4-pin) for CPU & System fan
Front Panel	1 (2 x 5-pin)
Chassis intrusion	1 (1 x 3-pin)
Power Connector	2 (1 x 4-pin/ 2 x 2-pin)
Mechanical and Environment	
Form Factor	Mini-ITX
Power Type	24-pin ATX Power connector, 4-pin ATX 12V power connector
Dimension	170 x 170 mm (6.69" x 6.69")
Operating Temp.	0 to 60°C
Storage Temp.	-20 to 80°C
Relative Humidity	10% to 90%, non-condensing
EMI Protection	CE, FCC Class-B

***All specifications and photos are subject to change without notice.**

1.3 Board Placement

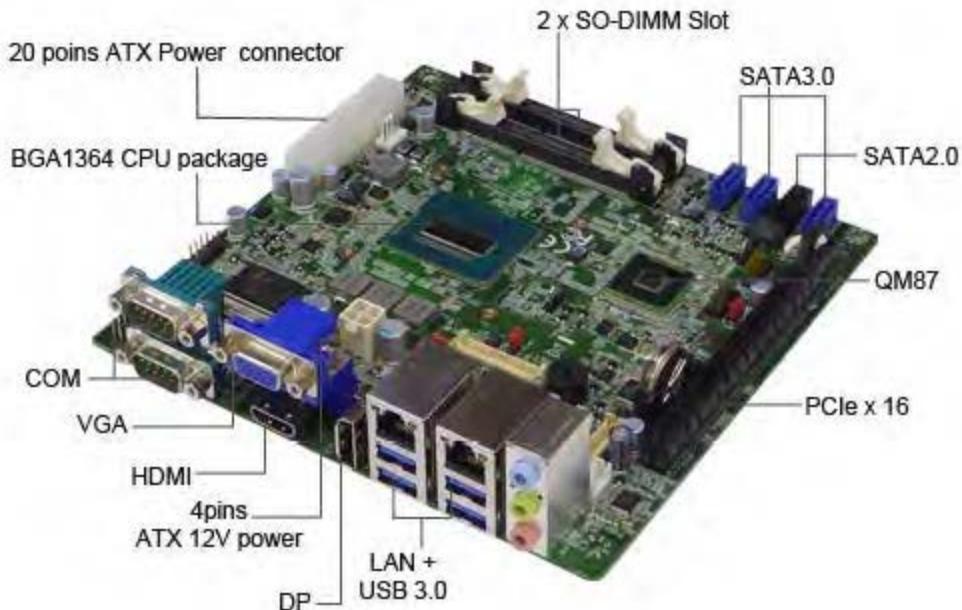

1.4 Mechanical Drawings

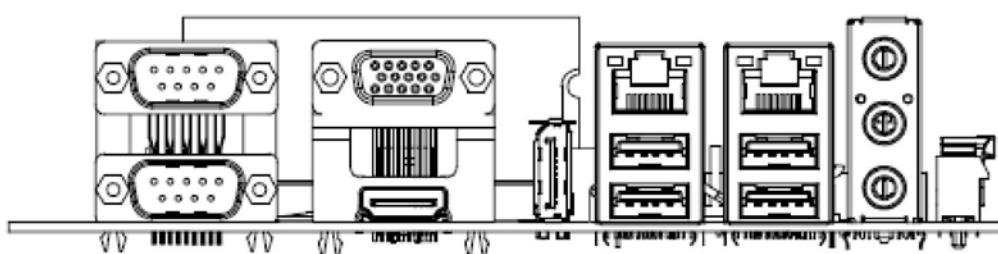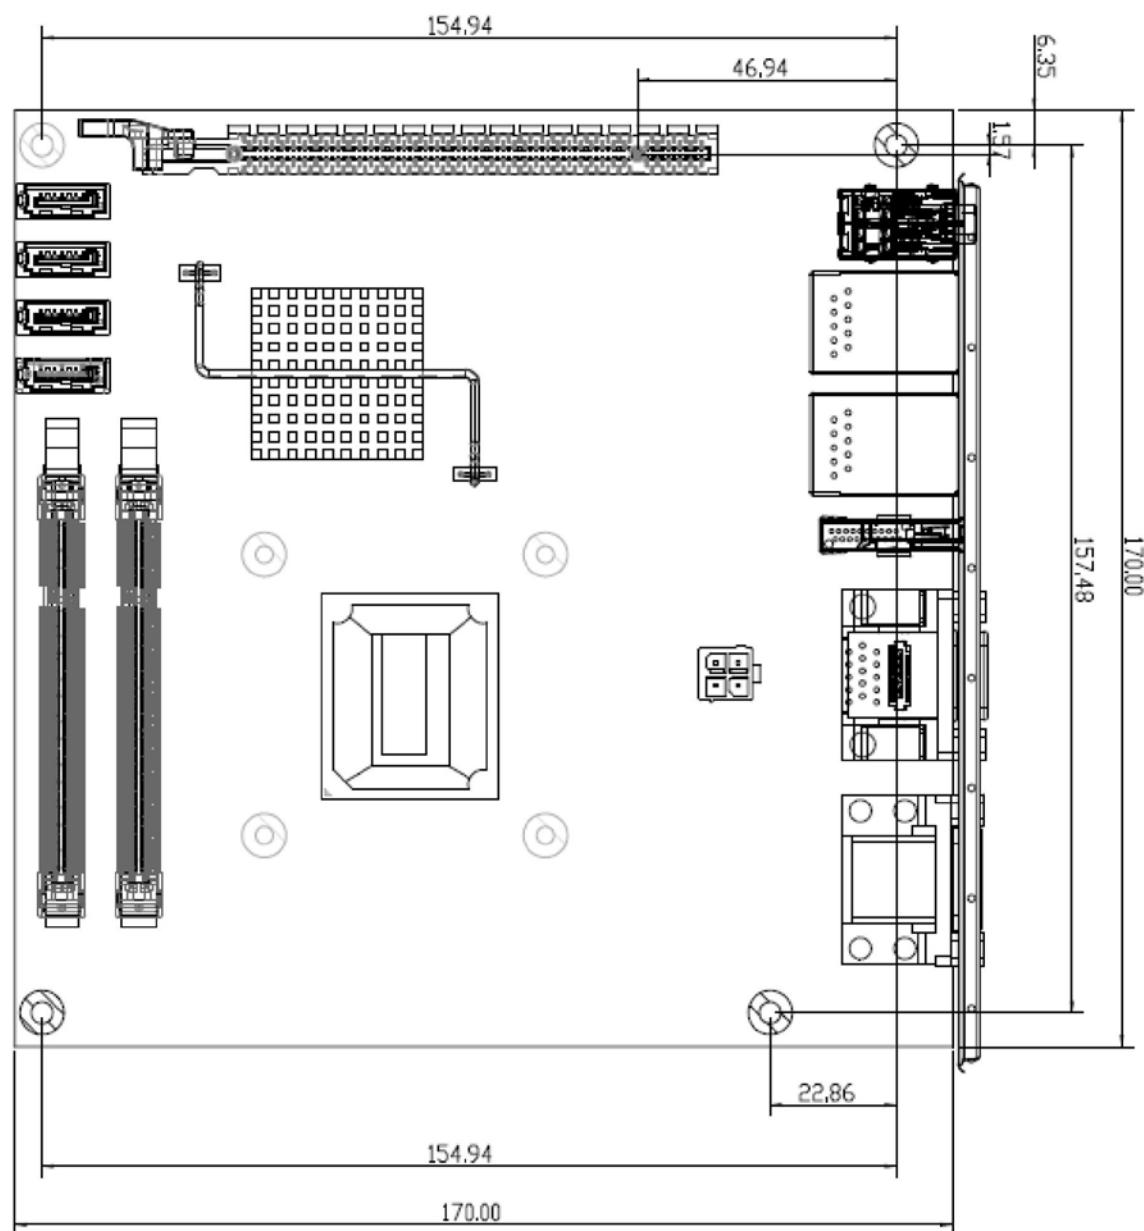

Chapter 2: Jumpers and Connectors

2.1 Jumpers and connectors list

JUMPERS	FUNCTION	REMARK
CMOS2	Clear CMOS	1 x 3 header
COM9_SW1	COM2 Pin9 Setting	2 x 3 header
COM9_SW2	COM1 Pin9 Setting	2 x 3 header
EDP_PWR1	EDP LCD Voltage Setting	1 x 3 header
EDP_PWR2	EDP LCD Voltage Setting	1 x 3 header
LCD_PWR	LVDS LCD Voltage Setting	1 x 3 header
ME_ENABLE1	ME Function Setting	1 x 2 header

CONNECTORS	FUNCTION	REMARK
ATX1	ATX Power Connector	2 x 12 Connector
BAT1	Battery Socket	
CPU_FAN	CPU FAN connector	1 x 4 wafer
DIMM1~2	Memory Socket	
EDP	EDP connector	2 x 20 connector
FP	Front Panel connector	2 x 5 header
F_USB1	USB connector	2 x 5 header
GPIO	GPIO Port connector	2 x 5 header
LCD_CTL	LCD Backlight Control Connector	1 x 5 wafer
LPC1	LPC Connector	2 x 5 box header
LVDS	LVDS connector	2 x 20 connector
PCIE_16X	PCIe x16 Connector	
PWR_CPU	CPU Power Connector	2 x 2 Connector
SATA0	SATA 3.0 Connector	
SATA1	SATA 2.0 Connector	
SATA2	SATA 3.0 Connector	
SATA3	SATA 3.0 Connector	
SPI_SOCKET	BIOS Socket	
SPK	Speaker connector	1 x 4 wafer
SYS_FAN	System FAN connector	1 x 4 wafer

2.2 Jumpers & Connectors setting

COMS2

PIN No.	Description	Setting
1-2	Normal <input type="checkbox"/>	
2-3	Clear CMOS	
Default setting: 1-2		

COM9_SW1/COM9_SW2

PIN No.	Description	Setting
1-2	5V	
3-4	12V	
5-6	RI	
Default setting: 5-6		


EDP_PWR1

PIN No.	Description	Setting
1-2	5V	
2-3	3.3V	
Default setting: 2-3		

EDP_PWR2

PIN No.	Description	Setting
1-2	3.3V	
2-3	12V	
Default setting: 2-3		


LCD_PWR

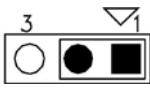PIN No.	Description	Setting
1-2	5V	
2-3	3.3V	
Default setting: 2-3		

ME_ENABLE1

PIN No.	Description	Setting
Short	Disable ME	
Open	Enable ME	
Default setting: open		

CPU_FAN /SYS_FAN (Wafer 4*1, 2.54mm, 1-Wall)

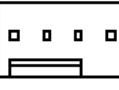PIN	DEFINITION	
1	GND	
2	+12V	
3	FAN speed sense	
4	FAN speed control	

FP

PIN	DEFINITION	PIN	DEFINITION
1	HD LED+	2	Power LED+
3	HD LED-	4	Power LED-
5	GND	6	Power Button
7	Reset Button	8	GND
9	NC	10	

F_USB1 (Pin Header, 5*2 2.54mm, pin9 empty)

PIN	DEFINITION	PIN	DEFINITION
1	5V Dual	2	5V Dual
3	USB8 -	4	USB9 -
5	USB8 +	6	USB9 +
7	GND	8	GND
9		10	

GPIO

PIN	DEFINITION	PIN	DEFINITION
1	VCC5	2	GP14 for input
3	GP57 for output	4	GP63 for input
5	GP64 for output	6	GP60 for input
7	GP56 for output	8	GP61 for input
9	GP37 for output	10	GND

SPK (Wafer, 4*1 2.0mm)

PIN	DEFINITION
1	SPK – R+
2	SPK – R-
3	SPK – L+
4	SPK – L-

LPC1 (Pin Header, 5*2, 2.54mm)

PIN	DEFINITION	PIN	DEFINITION
1	CLK_LPC	2	LPC AD1
3	PLTRST	4	LPC AD0
5	LPC FRAME	6	VCC3
7	LPC AD3	8	GND
9	LPC AD2	10	GND

LCD_CTL

PIN	DEFINITION
1	12V
2	GND
3	LCD_BKL
4	L_BKLT_CTRL
5	GND

F_USB1: USB

PIN	DEFINITION	PIN	DEFINITION
1	NC	2	NC
3	GND	4	GND
5	LVDSA_DATA0N	6	LVDSA_DATA1N
7	LVDSA_DATA0P	8	LVDSA_DATA1P
9	GND	10	GND
11	LVDSA_DATA2N	12	LVDSA_CLKN
13	LVDSA_DATA2P	14	LVDSA_CLKP
15	GND	16	GND
17	LVDSA_DATA3N	18	LVDSB_DATA0N
19	LVDSA_DATA3P	20	LVDSB_DATA0P
21	GND	22	GND
23	LVDSB_DATA1N	24	LVDSB_DATA2N
25	LVDSB_DATA1P	26	LVDSB_DATA2P
27	GND	28	GND
29	LVDSB_CLKN	30	LVDSB_DATA3N
31	LVDSB_CLKP	32	LVDSB_DATA3P
33	NC	34	GND
35	LVDS_DDC_CLK	36	GND
37	LVDS_DDC_DATA	38	LCD Voltage
39	NC	40	LCD Voltage

**EDP (Housing Header, 20*2)**

PIN	DEFINITION	PIN	DEFINITION
1	EDP_VCC_LCD	2	LED_PWR
3	EDP_VCC_LCD	4	LED_PWR
5	EDP_VCC_LCD	6	LED_PWR
7	NC	8	NC
9	GND	10	GND
11	NC	12	EDP_BKLT_CTRL
13	NC	14	EDP_LCD_BKL
15	GND	16	GND
17	EDP_HDP	18	NC
19	NC	20	NC
21	GND	22	GND
23	EDP_TXN_0	24	NC
25	EDP_TXP_0	26	NC
27	GND	28	GND
29	EDP_TXN_1	30	NC
31	EDP_TXP_1	32	NC
33	GND	34	GND
35	EDP_AUX_N	36	GND
37	EDP_AUX_P	38	GND
39	GND	40	GND



Chapter 3: Getting Started


3.1 Installing System Memory

The INS8337A supports 2 x 204-pin SO-DIMM socket support DDR3L 1333/1600 SDRAM Max. up to 16 GB memory



Disconnect all power supplies to the board before installing a memory module to prevent damage to the board and memory module.

To install a memory module:

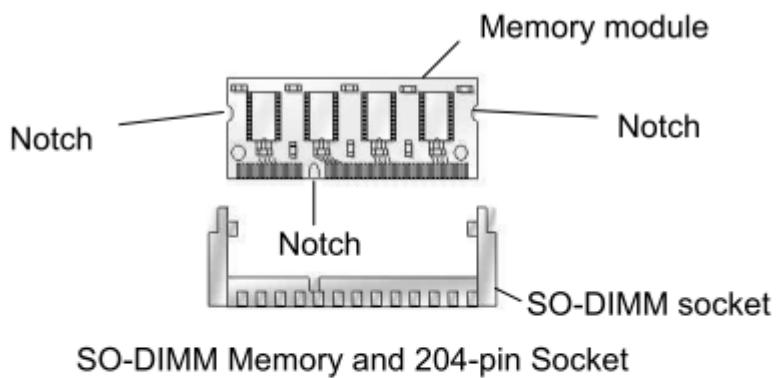

Memory Installation

Chapter 4: AMI BIOS UTILITY

This chapter provides users with detailed descriptions on how to set up a basic system configuration through the AMI BIOS setup utility.

4.1 Starting

To enter the setup screens, perform the following steps:

- Turn on the computer and press the key immediately.
- After the key is pressed, the main BIOS setup menu displays. Other setup screens can be accessed from the main BIOS setup menu, such as the Chipset and Power menus.

4.2 Navigation Keys

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process.

Some of the hot keys are <F1>, <F10>, <Enter>, <ESC>, and <Arrow> keys.



Some of the navigation keys may differ from one screen to another.

Left/Right	The Left and Right <Arrow> keys moves the cursor to select a menu.
Up/Down	The Up and Down <Arrow> keys moves the cursor to select a setup screen or sub-screen.
+– Plus/Minus	The Plus and Minus <Arrow> keys changes the field value of a particular setup setting.
Tab	The <Tab> key selects the setup fields.
F1	The <F1> key displays the General Help screen.
F10	The <F10> key saves any changes made and exits the BIOS setup utility.
Esc	The <Esc> key discards any changes made and exits the BIOS setup utility.
Enter	The <Enter> key displays a sub-screen or changes a selected or highlighted option in each menu.

4.3 Main Menu

The Main menu is the screen that first displays when BIOS Setup is entered, unless an error has occurred.



You could setup these items on the Main menu:

System Date: Set the date. Use Tab to switch between date elements.

System Time: Set the time. Use Tab to switch between time elements.


4.4 Advanced Menu

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.



4.4.1 ACPI Settings

System ACPI Parameters

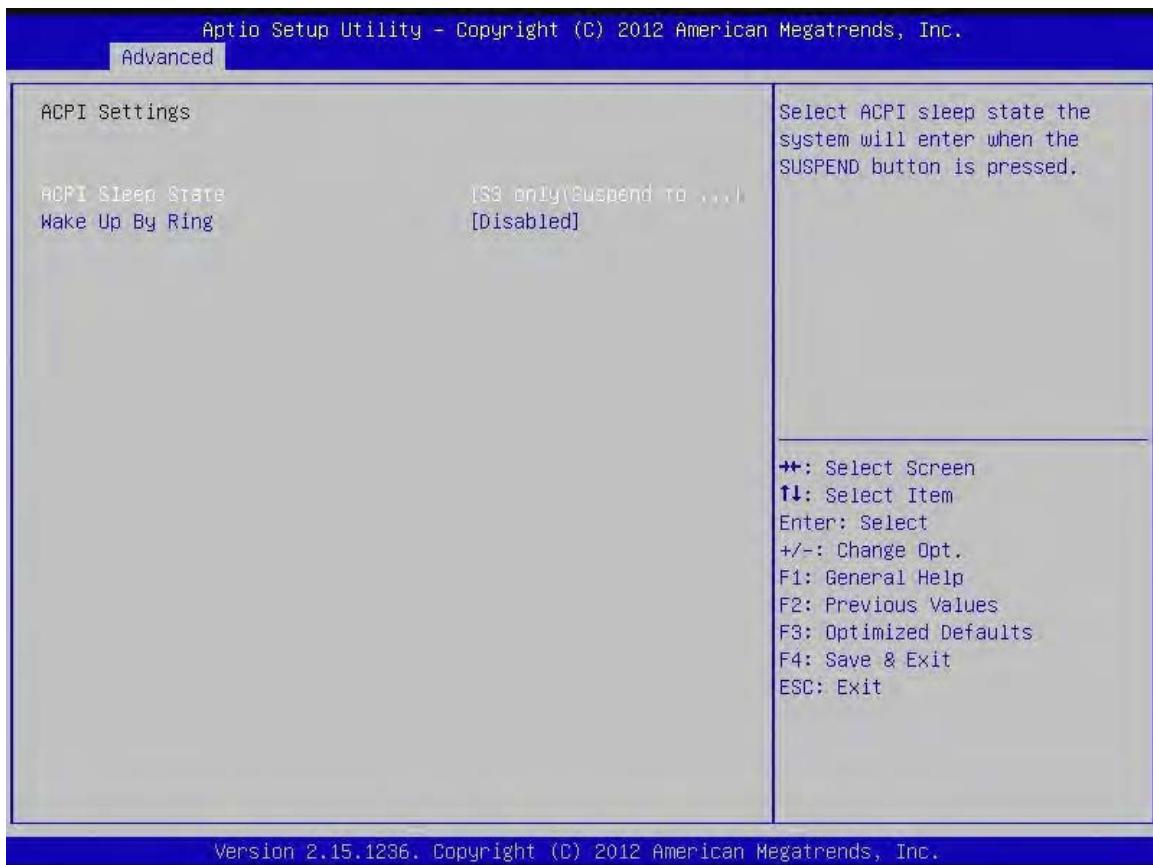

ACPI Sleep State

Select ACPI sleep state the system will enter when the SUSPEND button is pressed.

Wake Up by Ring

Main switch to enable Wake-Up by ring support

4.4.2 Trusted Computing

Trusted computing settings



Configuration

Security Device Support: Enables or disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available.

TPM State: Enable/Disable security device.

NOTE: your computer will reboot during restart in order to change state of the device

Pending operation

Schedule an operation for the security device

NOTE: your computer will reboot during restart in order to change state of security device

4.4.3 S5 RTC Wake settings

Enable system to wake from S5 using RTC alarm





Wake system with Fixed Time

Enable or disable system wake on alarm event. When enabled, system will wake on the hr::min::sec specified

4.4.4 CPU configuration

CPU configuration parameters.

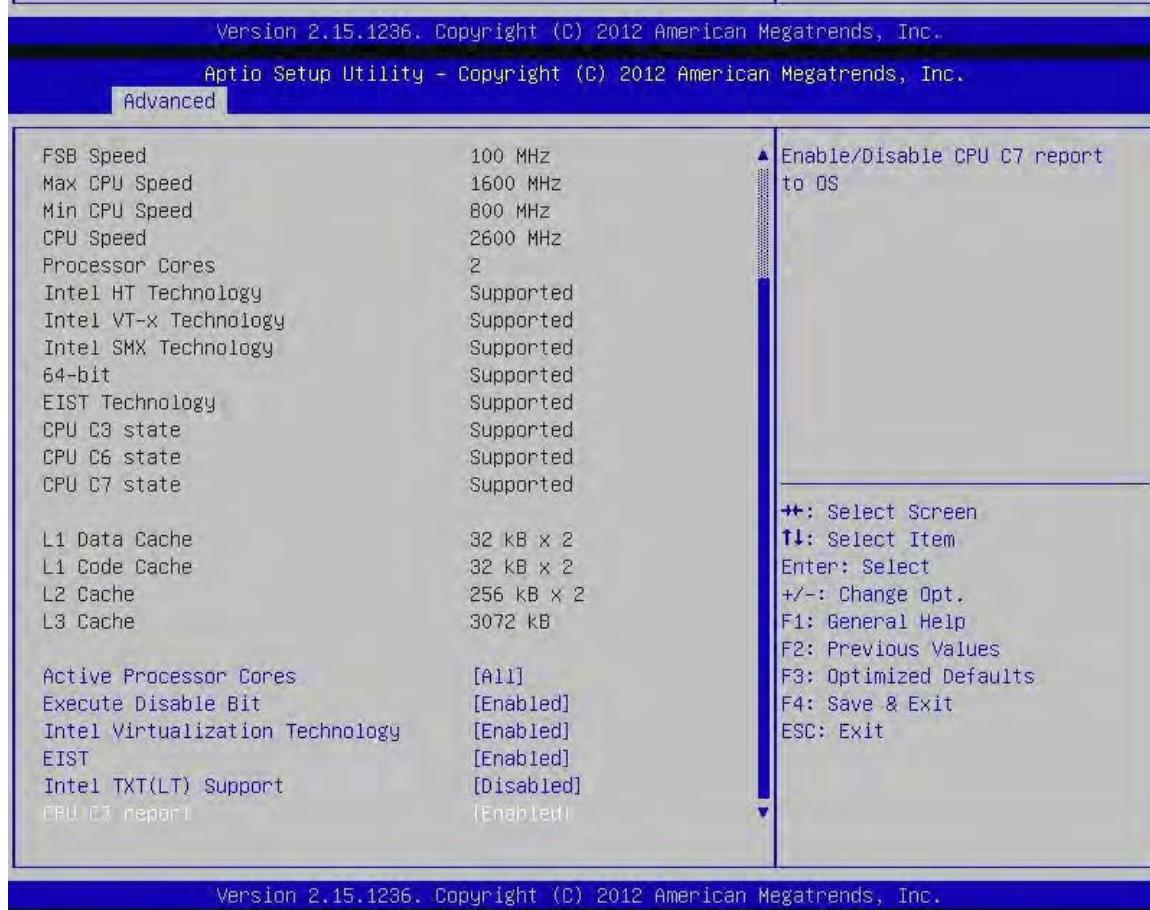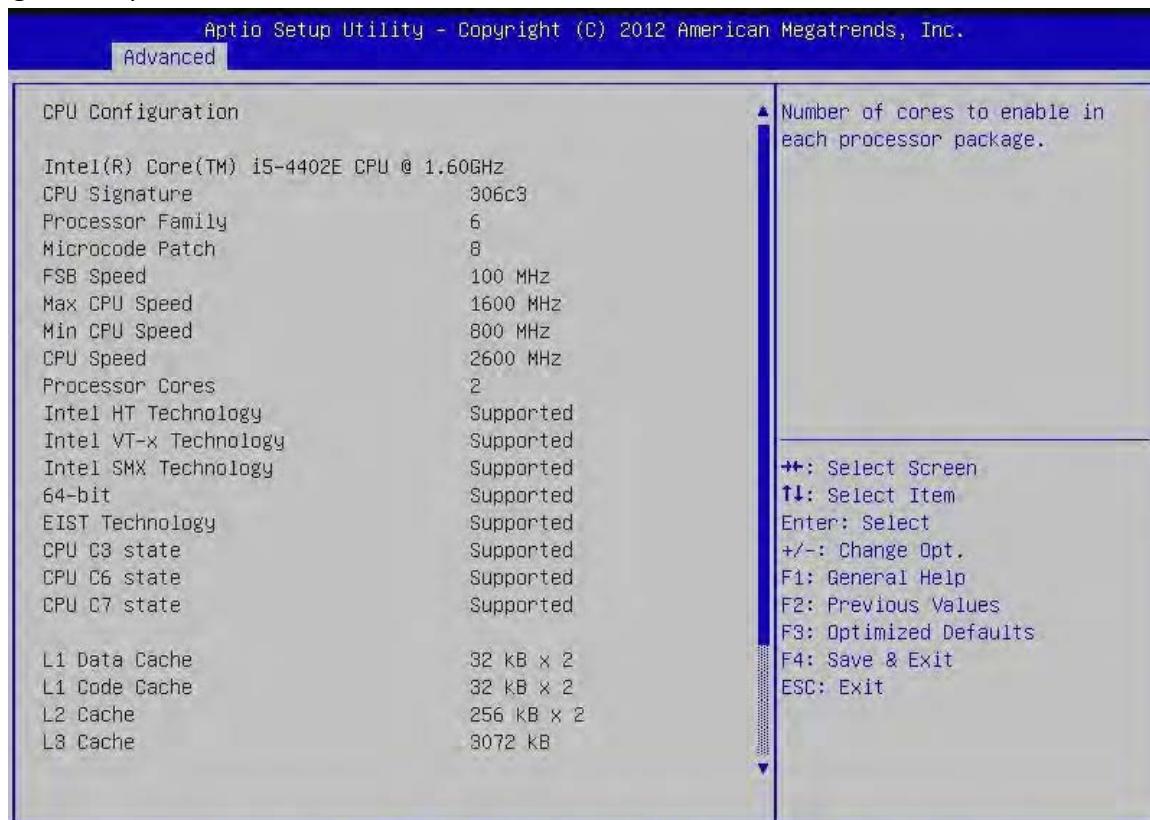

Active Processor Core

Number of cores to enable in each processor package

Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

Intel Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology

EIST

Enable/Disable Intel SpeedStep

Intel TXT(LT) Support

Enables or disables Intel TXT(LT) support

CPU C7 report

Enable/Disable CPU C7 report to OS

4.4.5 SATA Configuration

This section is used to configure the SATA drives.



SATA Controller(s)


Enable or disable SATA device.

SATA Mode Selection

Determines how SATA controller(s) operate. The options are: IDE, AHCI, RAID

4.4.6 AMT Configuration

Configure Active Management Technology parameters.

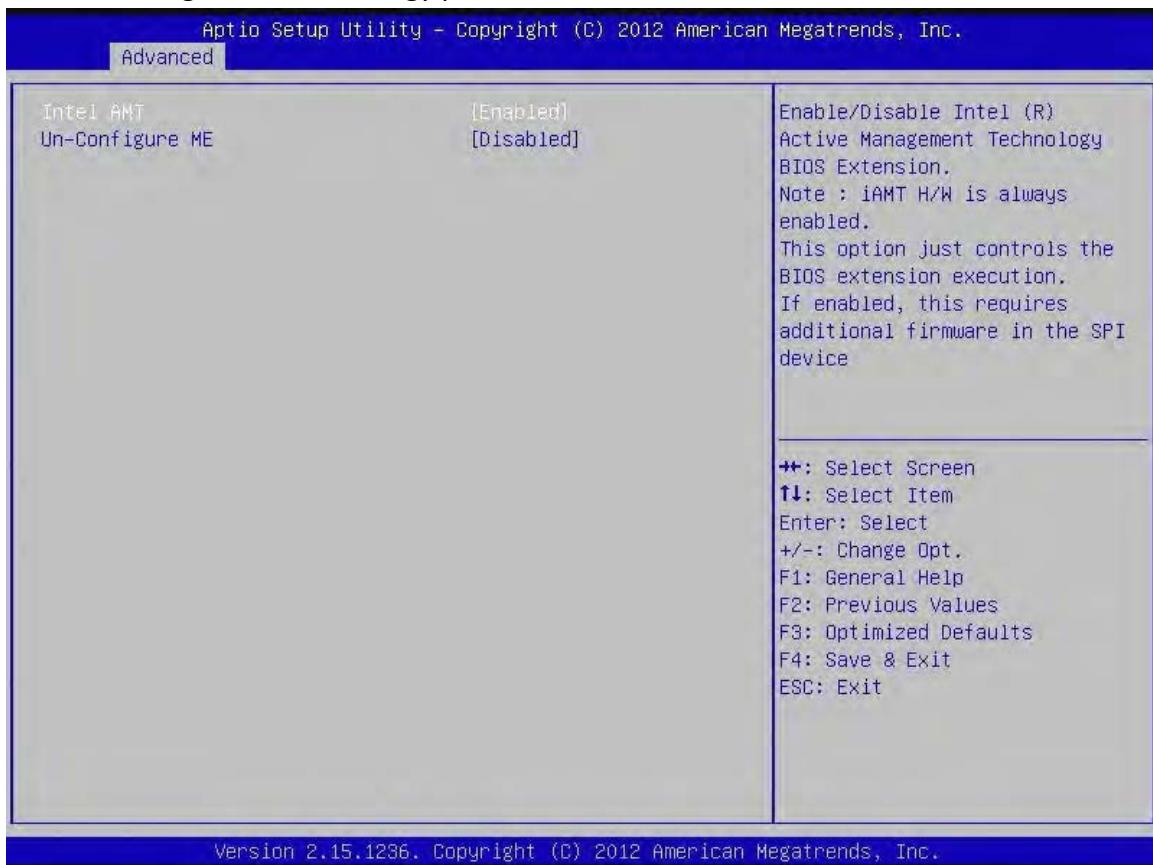

Intel AMT

Enable/Disable Intel Active Management Technology BIOS Extension.

Note: iAMT H/W is always enabled.

This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

Un-Configure ME

OEMFlag Bit 15: Un-Configure ME without password.

4.4.7 USB Configuration

USB Configuration Parameters.



Legacy USB Support

Enables legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.

USB Mass Storage Driver Support

Enable/Disable USB Mass Storage Driver Support.

4.4.8 Super IO Configuration

System Super IO chip parameters.



Serial Port 0 Configuration: Set Parameters of Serial Port 0 (COMB).

Serial Port: RS232


Serial Port 1 Configuration: Set Parameters of Serial Port 1 (COMB).

Serial Port: Enable or Disable Serial Port (COM).

Change Settings: Select an optimal setting for Super IO device.

4.4.9 HW Monitor

Monitor hardware status.

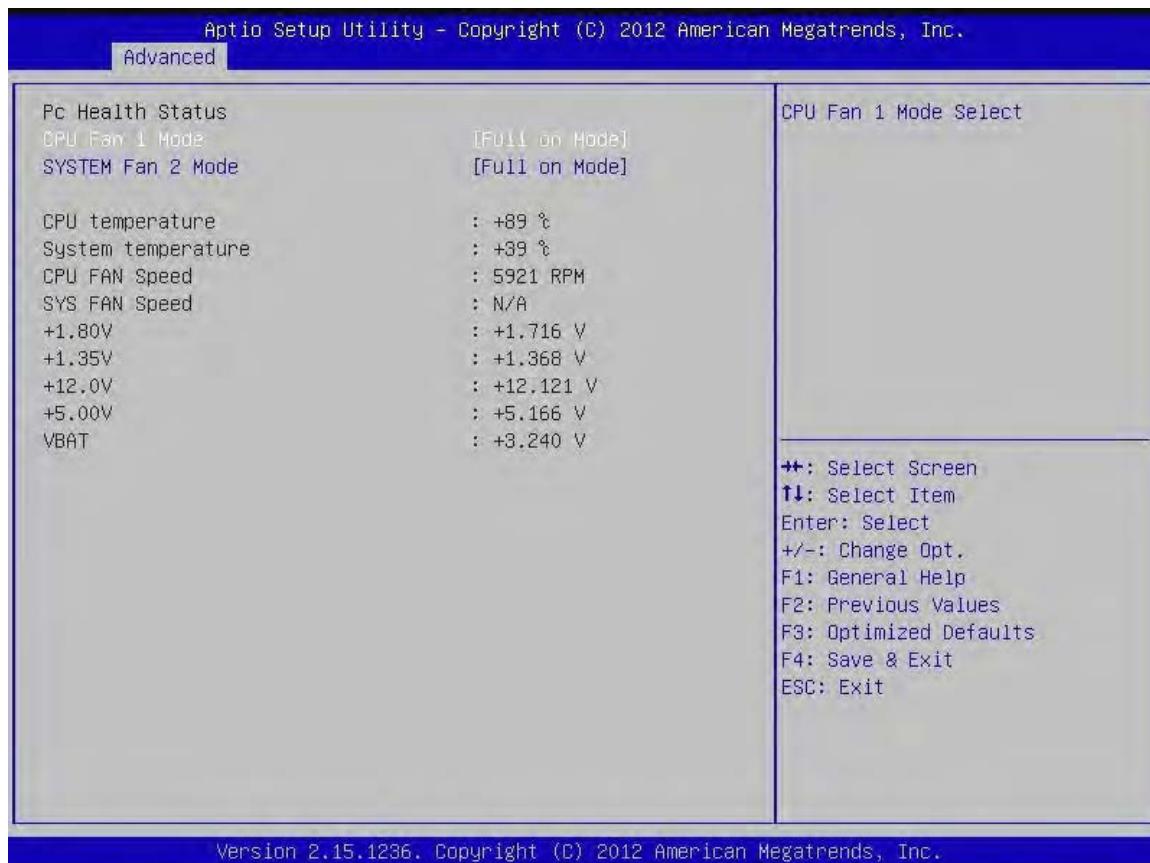

CPU Fan 1 Mode

CPU Fan 1 Mode select

SYSTEM Fan 2 Mode

System Fan 2 mode select

4.4.10 Network Stack

Network stack settings



Network Stack

Enable/Disable UEFI network stack

4.5 Chipset

This section gives you functions to configure the system based on the specific features of the chipset. The chipset manages bus speeds and access to system memory resources.



4.5.1 PCH IO configuration

PCH parameters



USB Configuration

XHCI Mode: Mode of operation of xHCI controller.

LAN1 Controller

Enable or disable onboard NIC.

LAN2 Controller

Control the PCI Express Root port

Restore AC Power Loss

Select AC power state when power is re-applied after a power failure

Azalia

Control Detection of the Azalia device.

Disabled=Azalia will be unconditionally disabled.

Enabled=Azalia will be unconditionally Enabled.

Auto=Azalia will be enabled if present, disabled otherwise.

4.5.2 System Agent (SA) Configuration



VT-d

Check to enable VT-d function on MCH.

Graphics Configuration

Config Graphics settings

Primary Display: select which of IGFX/PEG/PCI graphics device should be primary display or select SG for switchable GFX

Internal Graphics: Keep IGD enabled based on the setup options

Aperture Size: select the aperture size

LCD Control


Primary IGFX Boot Display: select the Video Device which will be activated during POST. This has no effect if external graphics present. Secondary boot display selection will appear based on your selection. VGA modes will be supported only on primary display.

Secondary IGFX Boot Display: select secondary display device

LCD Panel Type: select LCD panel used by Internal Graphics Device by selecting the appropriate setup item

4.6 Boot

This section is used to configure the boot features.

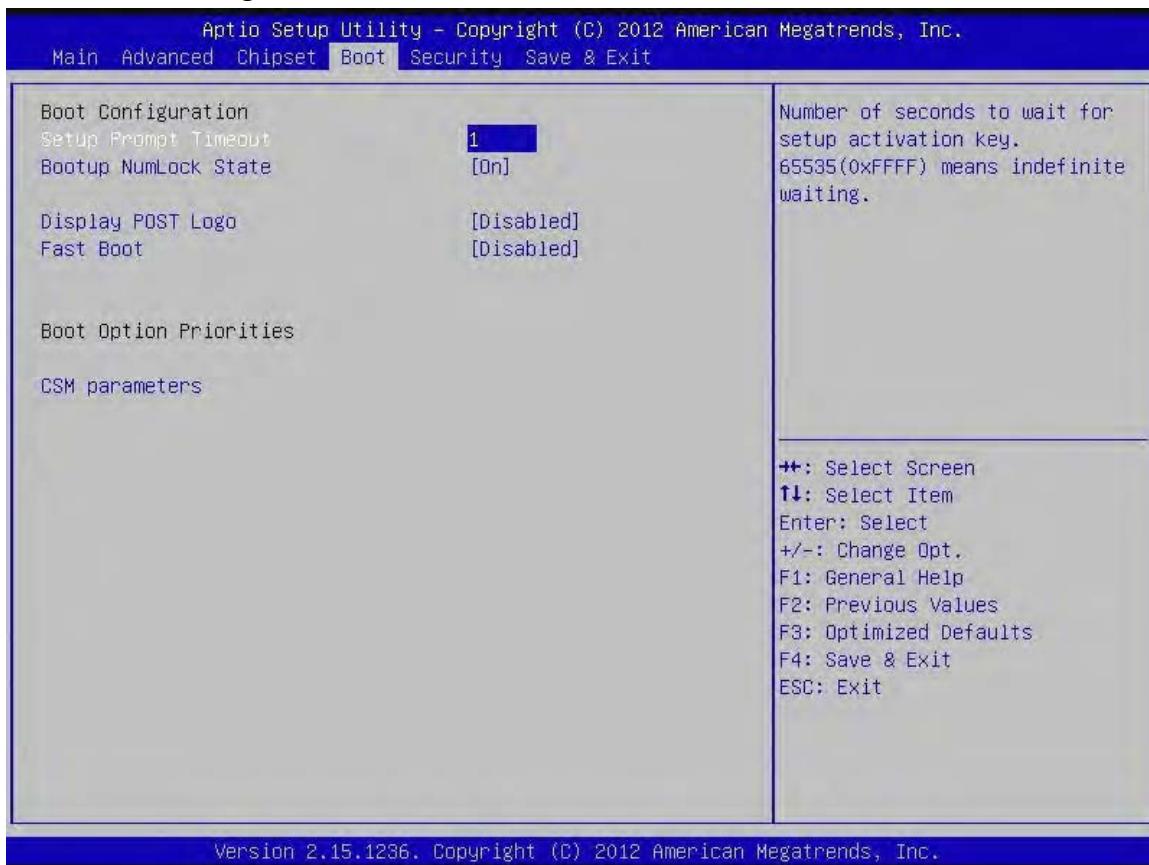

Setup Prompt Timeout

Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

Bootup NumLock State

Select the keyboard NumLock state.

Display POST Logo

Enables or disables Quiet Boot option

Fast Boot

Enables or disables boot with initialization of a minimal set of devices required to launch active boot option.

Has no effect for BBS boot options

CSM Parameters

OpROM execution, boot options filter, etc.

Launch CSA: this option controls if CSM will be launched

Boot option filter: this option controls what devices system can boot to

Launch PXE OpROM policy: Controls the execution of UEFI and Legacy PXE OpROM


Launch Storage OpROM policy: Controls the execution of UEFI and Legacy Storage OpROM.

Launch Video OpROM policy: controls the execution of UEFI and Legacy Video OpROM

Other PCI device ROM priority: FOR PCI devices other than Network, mass storage or video defines which OpROM to launch.

4.7 Security

Use the Security Menu to establish system passwords

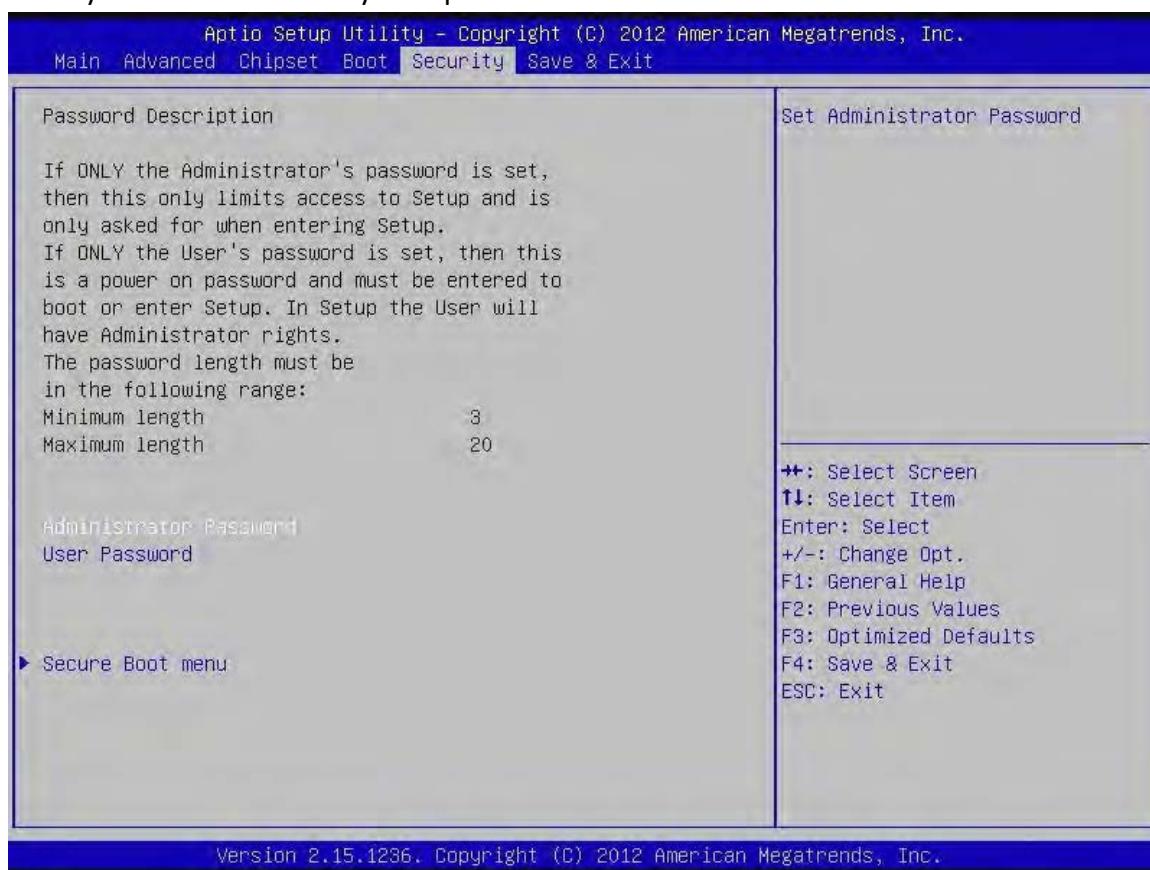

Administrator Password

Set Administrator Password.

User Password

Set User Password.

Secure Boot Menu

Customizable secure boot settings


Secure Boot Mode Control: secure boot flow control. Secure boot can be enabled only when

1. platform key (PK) is enrolled and platform is operating in user mode and
2. CSM function is disabled in setup

Secure Boot Mode: secure boor mode selector. 'Custom' Mode allows for more flexibility changing image execution policy and secure boot key management

4.8 Save and Exit

This screen provides functions for handling changes made to the BIOS settings and the exiting of the Setup program.

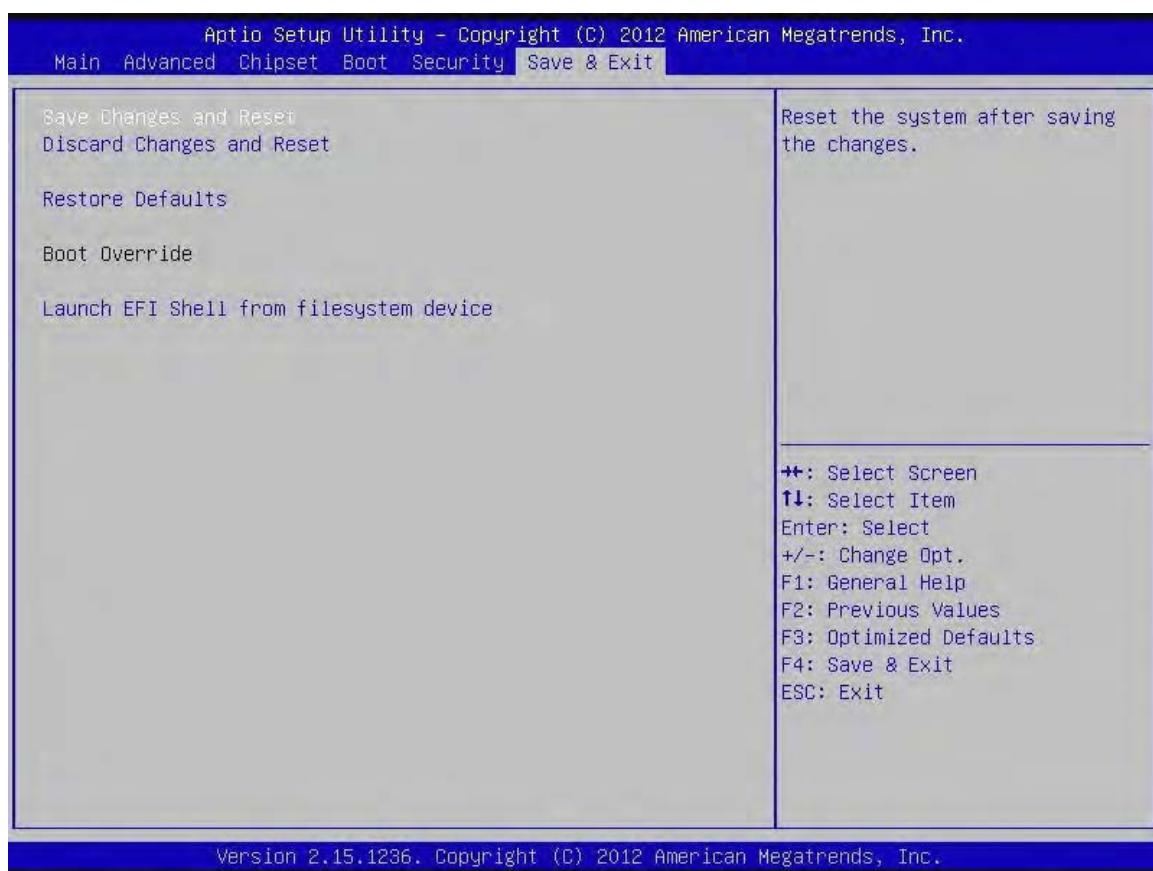

Save Changes and Reset

Reset the system after saving the changes.

Discard Changes and Reset

Reset system setup without saving any changes.

Restore Defaults

Restore/Load Default values for all the setup options.

Launch EFI Shell from filesystem device

Attempts to launch EFI Shell application (Shellx64.efi) from one of the available filesystem devices.